

## Test Report

SPONSOR: **EUREKA**  
Montréal, QC, Canada

**Sound Absorption**  
**RAL™-A20-427**

CONDUCTED: 2020-10-12

Page 1 of 8

ON: Quadrant 4232-35 (4 x 2 square array, 45 in. on center)

### TEST METHODOLOGY

Riverbank Acoustical Laboratories™ is accredited by the U.S. Department of Commerce, National Institute of Standards and Technology (NIST) under the National Voluntary Laboratory Accreditation Program (NVLAP) as an ISO 17025:2017 Laboratory (NVLAP Lab Code: 100227-0) and for this test procedure. The test reported in this document conformed explicitly with ASTM C423-17: "Standard Test Method for Sound Absorption and Sound Absorption Coefficients by the Reverberation Room Method." The specimen mounting was performed according to ASTM E795-16: "Standard Practices for Mounting Test Specimens During Sound Absorption Tests." A description of the measurement procedure and room specifications are available upon request. The results presented in this report apply to the sample as received from the test sponsor.

### INFORMATION PROVIDED BY SPONSOR

The test specimen was designated by the sponsor as Quadrant 4232-35 (4 x 2 square array, 45 in. on center). The following nominal product information was provided by the sponsor prior to testing. The accuracy of such sponsor-provided information can affect the validity of the test results.

#### Product Under Test

Product Name: Quadrant  
Product ID: 4232-35  
Manufacturer: EUREKA

### SPECIMEN MEASUREMENTS & TEST CONDITIONS

Through a full external visual inspection performed on the test specimen, Riverbank personnel verified the following information:

#### Test Specimen

Material: Semirigid felt paneling, two (2) perpendicular panels per object  
Dimensions: 8 @ 450 mm (17.75 in.) x 900 mm (35.5 in.)  
Rounded corners, radius @ 225 mm (8.858 in.)  
Felt panel thickness @ 9.32 mm (0.367 in.)  
Overall Weight: 10.32 kg (22.75 lbs)

## Test Report

**EUREKA**  
2020-10-12

**RAL™-A20-427**  
Page 2 of 8

### Physical Measurements (per object)

Dimensions: 0.45 m (17.75 in) wide by 0.9 m (35.5 in) long  
Felt Thickness: 9.32 mm (0.367 in.)  
Weight: 1.29 kg (2.84 lbs)

### Test Environment

Room Volume: 291.98 m<sup>3</sup>  
Temperature: 22.1 °C ± 0.0 °C (Requirement: ≥ 10 °C and ≤ 5 °C change)  
Relative Humidity: 57.6 % ± 0.4 % (Requirement: ≥ 40 % and ≤ 5 % change)  
Barometric Pressure: 97.5 kPa (Requirement not defined)

Each sound absorbing object had an absorptive area (all exposed surfaces) of 1.46 m<sup>2</sup> (15.67 ft<sup>2</sup>). The total absorptive area (all exposed surfaces) of all sound-absorbing objects was 11.65 m<sup>2</sup> (125.36 ft<sup>2</sup>). The array of objects covered 6.18 m<sup>2</sup> (66.56 ft<sup>2</sup>) of the horizontal test surface (total treated area).

### MOUNTING METHOD

Type J Mounting: The specimen is an array of 8 spaced sound absorbing objects suspended from cables such that the closest face is located approximately 578 mm (22.75 in.) from the horizontal test surface. This approximates the mounting method of a typical ceiling baffle installation. The objects were evenly distributed in a 4 x 2 square array, spaced 1143 mm (45 in.) on center. The lengths of the objects were oriented perpendicular to the horizontal test surface.

**Test Report**

**EUREKA**  
2020-10-12

**RAL™-A20-427**  
Page 3 of 8



Figure 1 – Specimen mounted in test chamber



Figure 2 – Detail of specimen material

1512 S BATAVIA AVENUE  
GENEVA, IL 60134  
630-232-0104

An **ALION** Technical Center

RIVERBANK.ALIONSCIENCE.COM

FOUNDED 1918 BY  
WALLACE CLEMENT SABINE

**Test Report**

**EUREKA**  
2020-10-12

**RAL™-A20-427**  
Page 4 of 8



Figure 3 – Detail of specimen material



## Test Report

**EUREKA**  
2020-10-12

**RAL™-A20-427**  
Page 5 of 8


### TEST RESULTS

Note: There is currently no standardized method for calculating Absorption Coefficients from spaced object absorbers. The sound absorption performance of spaced object absorbers should not be compared directly with specimens tested as a single rectangular area (e.g. mounting types A, E, etc.).

1/3 Octave Center Frequency (Hz)	Total Absorption		Absorption per Object	
	(m <sup>2</sup> )	(Sabins)	(m <sup>2</sup> / Object)	(Sabins / Object)
100	1.08	11.58	0.13	1.45
** 125	1.88	20.25	0.24	2.53
160	1.26	13.52	0.16	1.69
200	1.92	20.66	0.24	2.58
** 250	2.85	30.66	0.36	3.83
315	3.87	41.64	0.48	5.21
400	4.05	43.57	0.51	5.45
** 500	4.52	48.66	0.57	6.08
630	4.71	50.75	0.59	6.34
800	4.86	52.34	0.61	6.54
** 1000	4.97	53.46	0.62	6.68
1250	5.31	57.19	0.66	7.15
1600	5.70	61.34	0.71	7.67
** 2000	6.09	65.58	0.76	8.20
2500	6.40	68.92	0.80	8.62
3150	6.75	72.67	0.84	9.08
** 4000	6.83	73.56	0.85	9.20
5000	7.13	76.74	0.89	9.59

Tested by   
Marc Sciaky  
Senior Experimentalist

Report by   
Malcolm Kelly  
Test Engineer, Acoustician

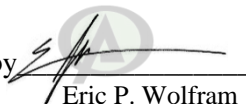Approved by   
Eric P. Wolfram  
Laboratory Manager

Test Report


EUREKA  
2020-10-12

RAL™-A20-427

Page 6 of 8

SOUND ABSORPTION REPORT

Quadrant 4232-35 (4 x 2 square array, 45 in. on center)

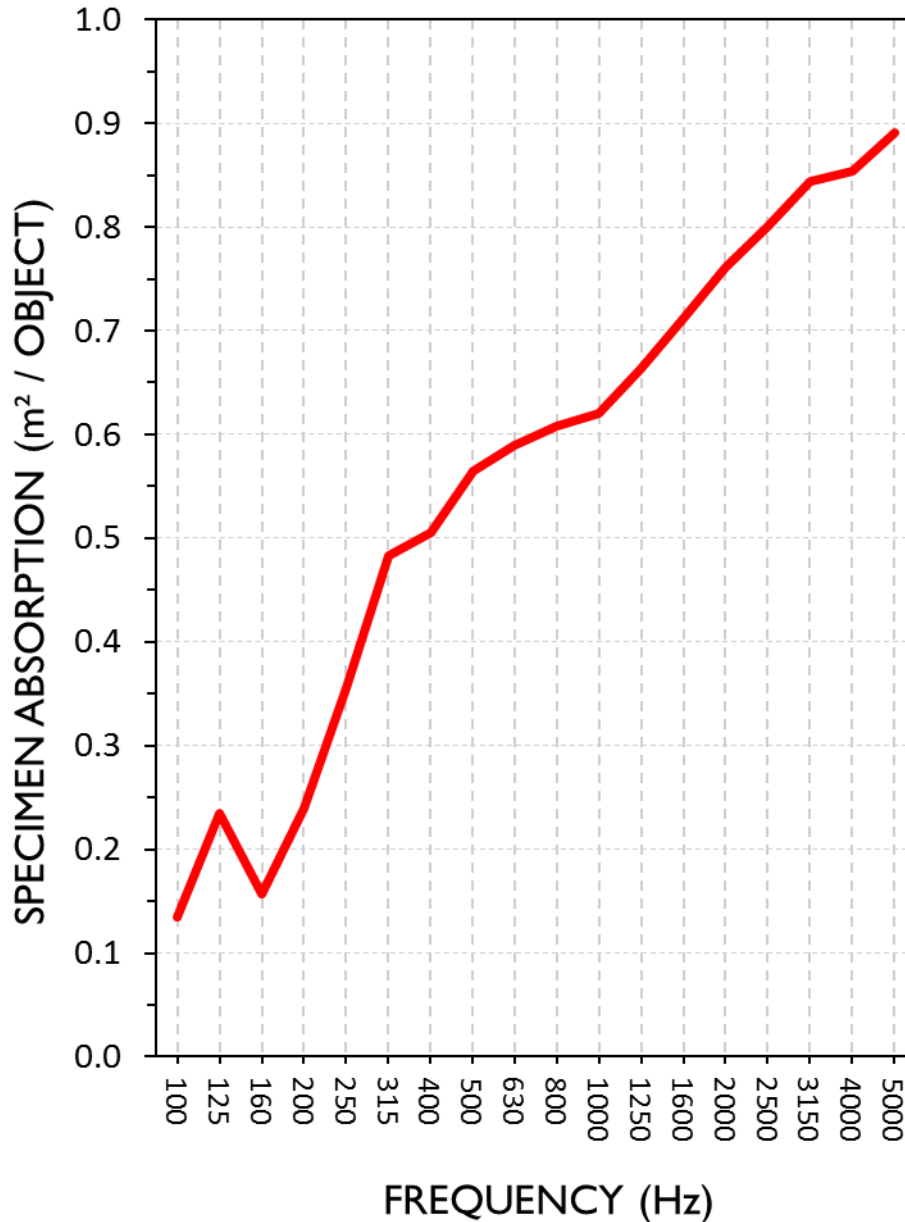

## Test Report

**EUREKA**  
2020-10-12

**RAL™-A20-427**  
Page 7 of 8

### APPENDIX A: Extended Frequency Range Data

Specimen: Quadrant 4232-35 (4 x 2 square array, 45 in. on center) (See Full Report)

*The following non-accredited data were obtained in accordance with ASTM C423-17, but extend beyond the defined frequency range of 100Hz to 5,000Hz. These unofficial results are representative of the RAL test environment only and intended for research & comparison purposes.*

1/3 Octave Band Center Frequency (Hz)	Total Absorption		Absorption per Object	
	(m <sup>2</sup> )	(Sabins)	(m <sup>2</sup> / Object)	(Sabins / Object)
31.5	0.82	8.85	0.10	1.11
40	-0.38	-4.07	-0.05	-0.51
50	-1.26	-13.53	-0.16	-1.69
63	0.77	8.33	0.10	1.04
80	1.24	13.35	0.16	1.67
100	1.08	11.58	0.13	1.45
125	1.88	20.25	0.24	2.53
160	1.26	13.52	0.16	1.69
200	1.92	20.66	0.24	2.58
250	2.85	30.66	0.36	3.83
315	3.87	41.64	0.48	5.21
400	4.05	43.57	0.51	5.45
500	4.52	48.66	0.57	6.08
630	4.71	50.75	0.59	6.34
800	4.86	52.34	0.61	6.54
1000	4.97	53.46	0.62	6.68
1250	5.31	57.19	0.66	7.15
1600	5.70	61.34	0.71	7.67
2000	6.09	65.58	0.76	8.20
2500	6.40	68.92	0.80	8.62
3150	6.75	72.67	0.84	9.08
4000	6.83	73.56	0.85	9.20
5000	7.13	76.74	0.89	9.59
6300	7.52	80.99	0.94	10.12
8000	7.78	83.75	0.97	10.47
10000	7.86	84.62	0.98	10.58
12500	8.00	86.14	1.00	10.77

1512 S BATAVIA AVENUE  
GENEVA, IL 60134  
630-232-0104

An ALION Technical Center

RIVERBANK.ALIONSCIENCE.COM

FOUNDED 1918 BY  
WALLACE CLEMENT SABINE

## Test Report

EUREKA  
2020-10-12

RAL™-A20-427  
Page 8 of 8

### APPENDIX B: Instruments of Traceability

Specimen: Quadrant 4232-35 (4 x 2 square array, 45 in. on center) (See Full Report)

<u>Description</u>	<u>Model</u>	<u>Serial Number</u>	<u>Date of Certification</u>	<u>Calibration Due</u>
System 1	Type 3160-A-042	3160-106968	2020-06-26	2021-06-26
Bruel & Kjaer Mic And Preamp A	Type 4943-B-001	2311428	2020-09-30	2021-09-30
Bruel & Kjaer Pistonphone	Type 4228	2781248	2020-08-12	2021-08-12
Omega Digital Temp., Humid. And Pressure Recorder	OM-CP-PRHTemp2000	P97844	2020-02-18	2021-02-18

### APPENDIX C: Revisions to Original Test Report

Specimen: Quadrant 4232-35 (4 x 2 square array, 45 in. on center) (See Full Report)

<u>Date</u>	<u>Revision</u>
2020-11-10	Original report issued

---

END



SPONSOR: **EUREKA**  
Montréal, QC, Canada

Report Referenced: **RAL™-A20-427**  
Page 1 of 3

CONDUCTED: 2020-10-12

ON: Quadrant 4232-35 (4 x 2 square array, 45 in. on center) (See Full Test Report for Details)

### **Appendix D to ASTM C423 Sound Absorption Test**

Non-standard calculation of equivalent NRC Rating and Absorption Coefficients from spaced absorbers

At this time, ASTM C423 does not provide a standard method for determining absorption coefficients of spaced object absorbers. Tests of a set of sound absorbing objects spaced apart from each other will yield higher absorption rates than a specimen joined together as a single patch (A-Mount or E-Mount). For this reason it is unfair to provide NRC or absorption coefficient ratings for specimens that consist of a spaced set of absorbers. Despite this, the architectural industry has expressed great demand for a simple "single number" rating for these treatments. Likewise, acoustical consultants desire equivalent absorption coefficient data for use in acoustical modeling software. The following is an attempt to appease these demands until ASTM develops a standard method for calculation. Several alternate non-standard calculation methods are provided. Riverbank Acoustical Laboratories prefers method 1; ratings yielded from this method have titles with the prepended word "Equivalent". Rating titles for the remaining methods are prepended with the word "Apparent". These rating names and their associated acronyms are provided by RAL and shall not be misconstrued as originating from any current standard.

#### **Method 1) Equivalent Sound Absorption Coefficient calculated from extended test specimen envelope**

The total sound absorption yielded by the specimen is divided by the surface area of the test surface covered by the suspended objects, including intermediate spaces, with additional added area to allow theoretical extrapolation for larger arrays. The object rigging covered 6.18 m<sup>2</sup> (66.56 ft<sup>2</sup>) of horizontal test surface area. With an extra 692.15 mm (27.25 in.) of length and width to account for the space between the tested array and what would be the next objects in a larger array, the surface area comes to 10.45 m<sup>2</sup> (112.5 ft<sup>2</sup>). Equivalent sound absorption coefficients, and subsequently the Equivalent Noise Reduction Coefficient (E\*NRC) and Equivalent Sound Absorption Average (E\*SAA) ratings, are calculated using this surface area based on the methods described in ASTM C423-17. This may be the most accurate method for comparing object arrays to ceiling tile products. The equivalent sound absorption coefficient data can be assigned to a single horizontal surface or plane in acoustical modeling software for approximation of object array performance. Such approximations rely on the assumptions that object spacing is similar to that of the tested array across the entire surface, that gaps are negligibly small between adjacent rows of objects if the test specimen consists of a single row, and that the installation occurs over a perfectly reflective surface material.

#### **Method 2) Apparent Sound Absorption Coefficient calculated from total exposed surface area of specimen**

The total sound absorption yielded by the specimen is divided by the total surface area of all exposed specimen faces (1.46 m<sup>2</sup> (15.67 ft<sup>2</sup>) per object x 8 objects = 11.65 m<sup>2</sup> (125.36 ft<sup>2</sup>) total surface area). Apparent sound absorption coefficients, and subsequently the Apparent Noise Reduction Coefficient (A\*NRC) and Apparent Sound Absorption Average (A\*SAA) ratings, are calculated using this surface area based on the methods described in ASTM C423-17. This method shows the actual absorption occurring at the exposed surfaces but does not provide a fair comparison with materials mounted as a uniform patch (in A-mount or E-mount).

EUREKA  
2020-10-12

Report Referenced: RAL™-A20-427  
Page 2 of 3

## Appendix D (continued)

### Method 3) Apparent Sound Absorption Coefficient calculated from one face per object

The total sound absorption yielded by the specimen is divided by the surface area of one side of one large face for each object in the specimen. Apparent sound absorption coefficients, and subsequently the Apparent Noise Reduction Coefficient (A\*NRC) and Apparent Sound Absorption Average (A\*SAA) ratings, are calculated using this surface area based on the methods described in ASTM C423-17. This method is favored by some material manufacturers since it yields very high NRC figures, but does not provide a fair comparison with other ceiling tile or wall panel products. Riverbank Acoustical Laboratories recommends that results obtained from this method be used for research and comparison purposes only; such results should not be used for marketed claims of product performance. This method is deemed not useful or applicable to the specimen under test.

### Method 4) Apparent Sound Absorption Coefficient calculated from specimen envelope without extension

The total sound absorption yielded by the specimen is divided by the rectangular test surface area covered by the suspended objects, including intermediate spaces. The object rigging covered 6.18 m<sup>2</sup> (66.56 ft<sup>2</sup>) of horizontal test surface area. Apparent sound absorption coefficients, and subsequently the Apparent Noise Reduction Coefficient (A\*NRC) and Apparent Sound Absorption Average (A\*SAA) ratings, are calculated using this surface area based on the methods described in ASTM C423-17. While similar in concept to Method 1, attempting to model any array larger than the tested specimen using these results would imply instances of adjacent objects with zero spacing scattered throughout the extrapolated array. Riverbank Acoustical Laboratories recommends that results obtained from this method be used for research and comparison purposes only; such results should not be used for marketed claims of product performance.

EUREKA  
2020-10-12

Report Referenced: **RAL™-A20-427**

Page 3 of 3

**Appendix D: Data** Note: See full test report for details of mounting position, spacing, and configuration, as these parameters greatly affect sound absorption performance.

Specimen Absorption (ft <sup>2</sup> )			Method 1	Method 2	Method 3	Method 4
Freq. (Hz)	Sabins	Sabins / Object	Equivalent	Apparent	Apparent	Apparent
			Abs. Coefficient From Area of Extended Specimen Envelope (112.5 ft <sup>2</sup> )	Abs. Coefficient From Total Exposed Surface Area (125.36 ft <sup>2</sup> )	Abs. Coefficient From One Face Per Object (Not Applicable)	Abs. Coefficient From Unextended Envelope Area (66.56 ft <sup>2</sup> )
31.5	8.85	1.11	0.08	0.07		0.13
40	-4.07	-0.51	-0.04	-0.03		-0.06
50	-13.53	-1.69	-0.12	-0.11		-0.20
63	8.33	1.04	0.07	0.07		0.13
80	13.35	1.67	0.12	0.11		0.20
100	11.58	1.45	0.10	0.09		0.17
125	20.25	2.53	0.18	0.16		0.30
160	13.52	1.69	0.12	0.11		0.20
200	20.66	2.58	0.18	0.16		0.31
250	30.66	3.83	0.27	0.24		0.46
315	41.64	5.21	0.37	0.33		0.63
400	43.57	5.45	0.39	0.35		0.65
500	48.66	6.08	0.43	0.39		0.73
630	50.75	6.34	0.45	0.40		0.76
800	52.34	6.54	0.47	0.42		0.79
1,000	53.46	6.68	0.48	0.43		0.80
1,250	57.19	7.15	0.51	0.46		0.86
1,600	61.34	7.67	0.55	0.49		0.92
2,000	65.58	8.20	0.58	0.52		0.99
2,500	68.92	8.62	0.61	0.55		1.04
3,150	72.67	9.08	0.65	0.58		1.09
4,000	73.56	9.20	0.65	0.59		1.11
5,000	76.74	9.59	0.68	0.61		1.15
6,300	80.99	10.12	0.72	0.65		1.22
8,000	83.75	10.47	0.74	0.67		1.26
10,000	84.62	10.58	0.75	0.68		1.27
12,500	86.14	10.77	0.77	0.69		1.29
<b>Equivalent NRC:</b>			<b>0.45</b>	<b>N/A</b>		<b>N/A</b>
<b>Apparent NRC:</b>			<b>N/A</b>	<b>0.40</b>		<b>0.75</b>
<b>Equivalent/Apparent SAA:</b>			<b>0.44</b>	<b>0.40</b>		<b>0.75</b>

Prepared by

*Keith Kimberling*  
Keith Kimberling  
Test Engineer, Acoustician